

28 TYRANID PRIME



PUSH-FIT







TOOLS
REQUIRED




NO GLUE

28 a

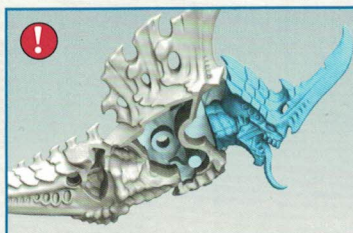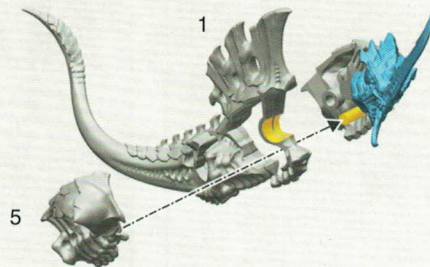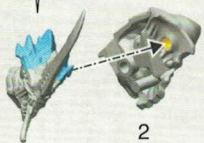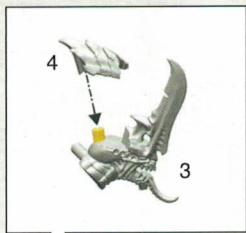

Use the halves of the torso to lock the head into place.


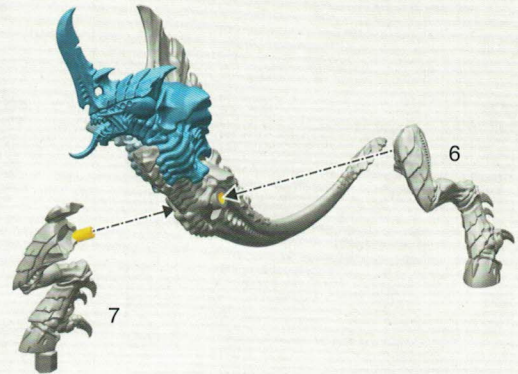


28 b

Fit the wing first, then the scything talon.



28 a

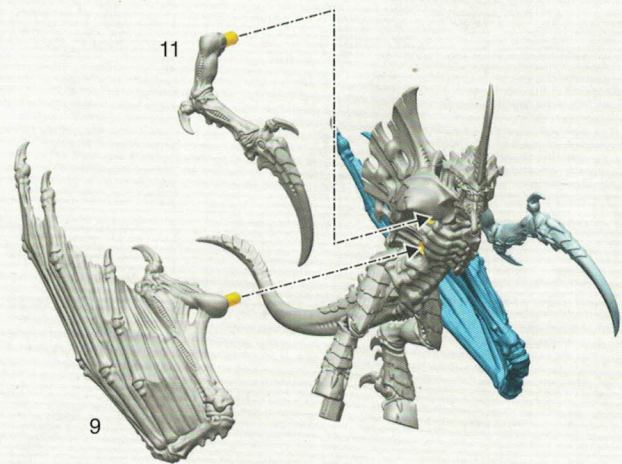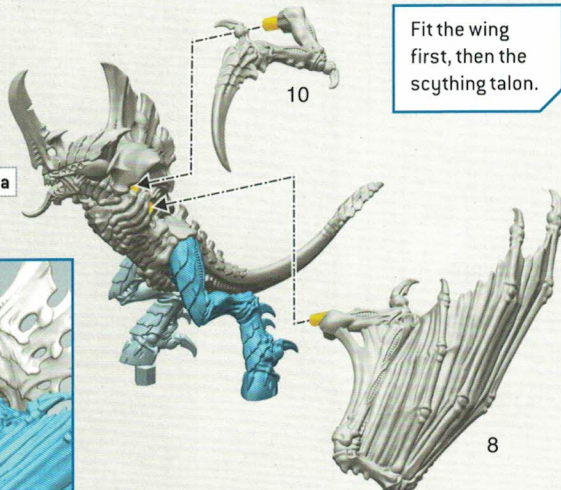

28 c

28 b

Ø 50mm



Line the model up on the base as seen in the image on the right before attaching it.

